



VW T6 SPOILER - 1 PIECE INSTALLATION INSTRUCTIONS

VEHICLE DESCRIPTION: VW T6 MY 2015>
PART NUMBER: ZGB7H0071647

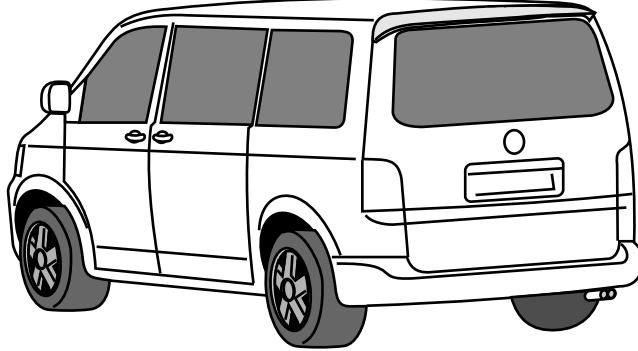


COMPONENTS LIST

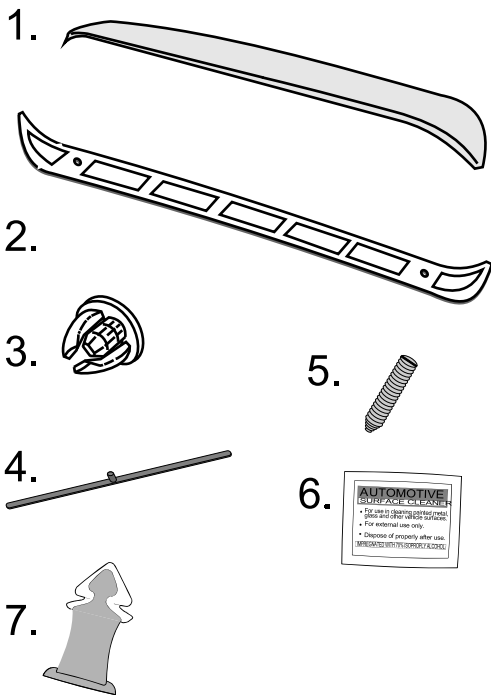









ITEM No.	COMPONENTS	QTY.
1	Spoiler	1
2	Foam Tape Gasket	1
3	plastic inserts	2
4	Installation Aides	2
5	M6 Threaded Studs	2
6	Alcohol Wipes	1
7	Corrosion Inhibitor	1
8	Adhesive (not supplied) Please use part number HH381014	1









8. Please use
part number
HH381014
(not supplied)


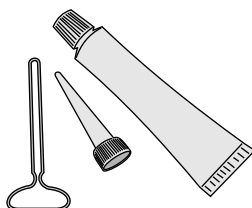


IMPORTANT:


This product must be installed exactly as specified in these instructions. Failure to do so may result in improper fit and/or inadequate tension.

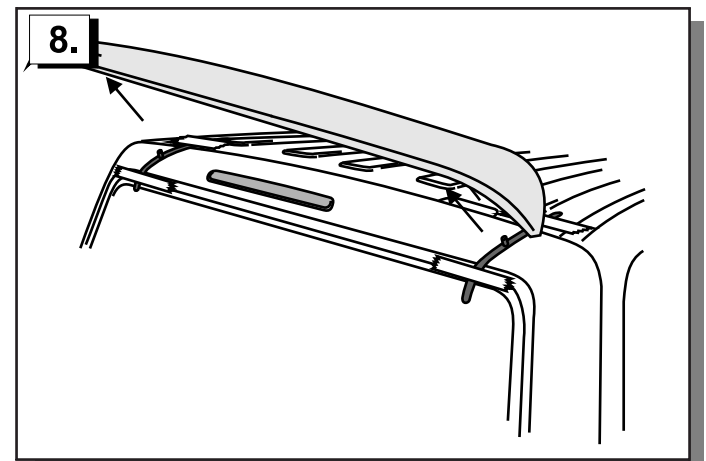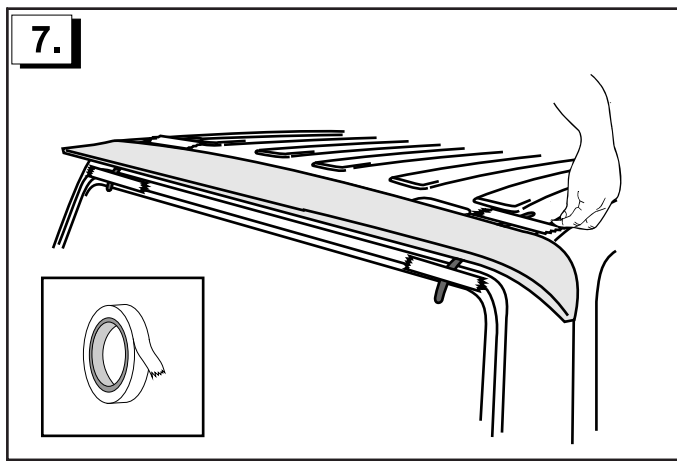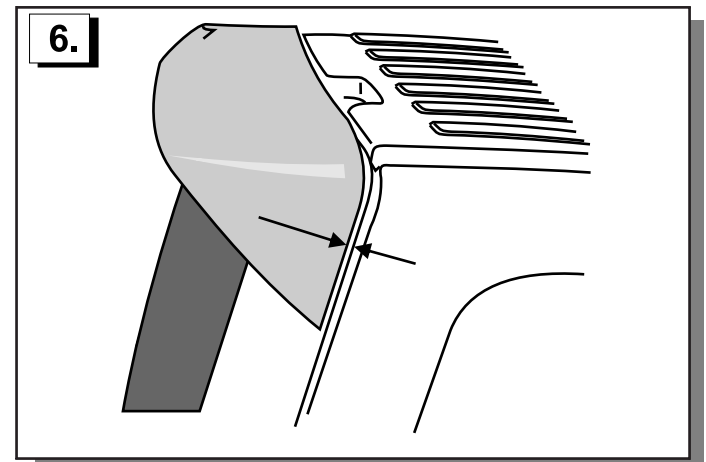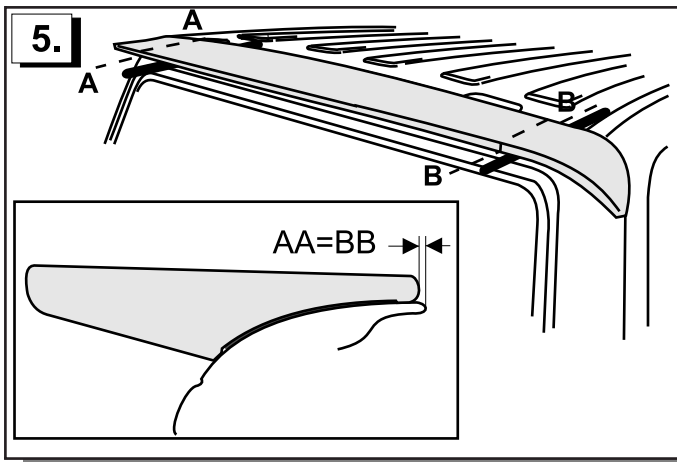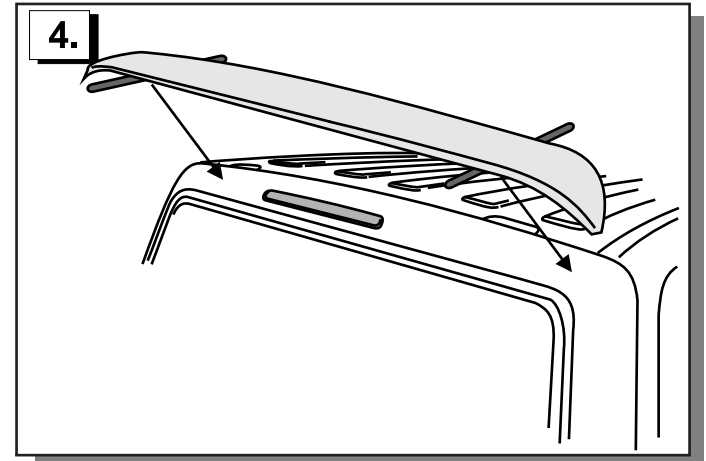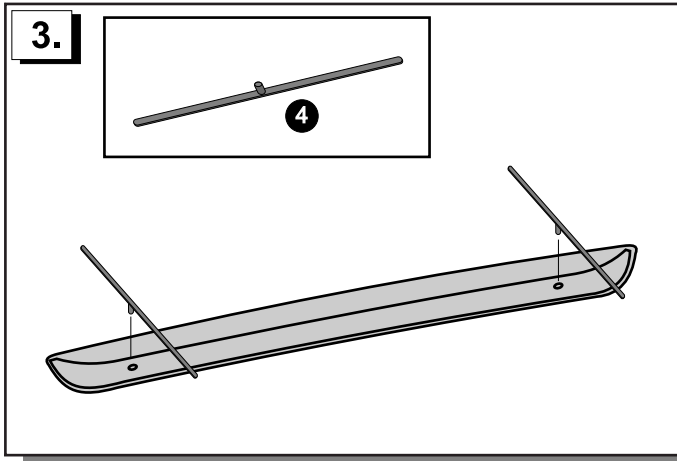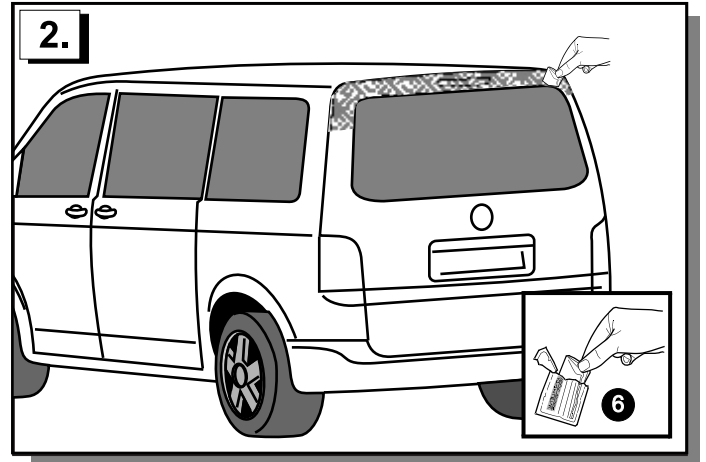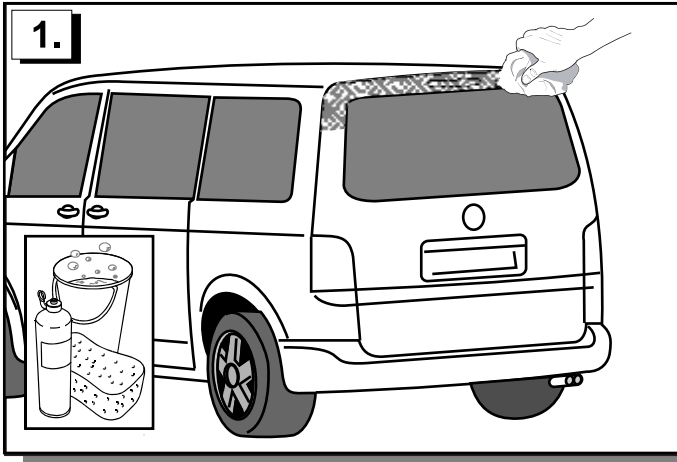

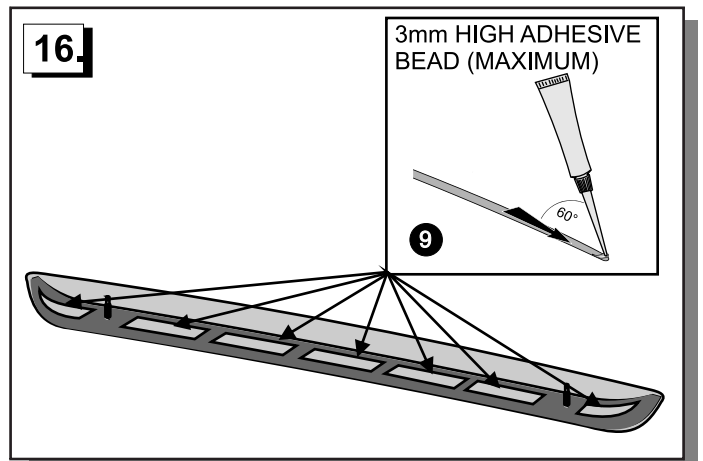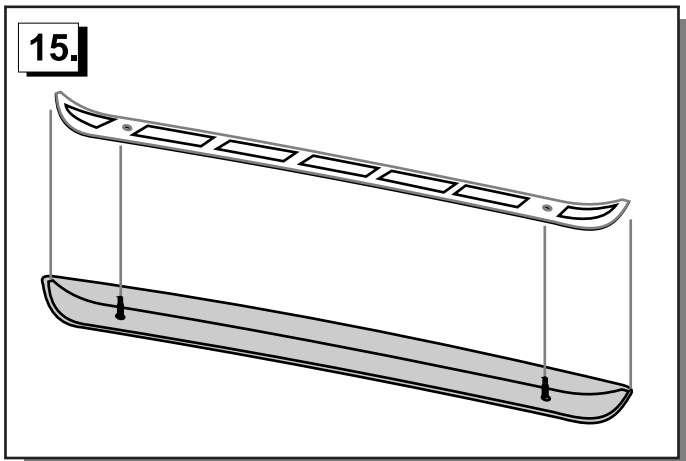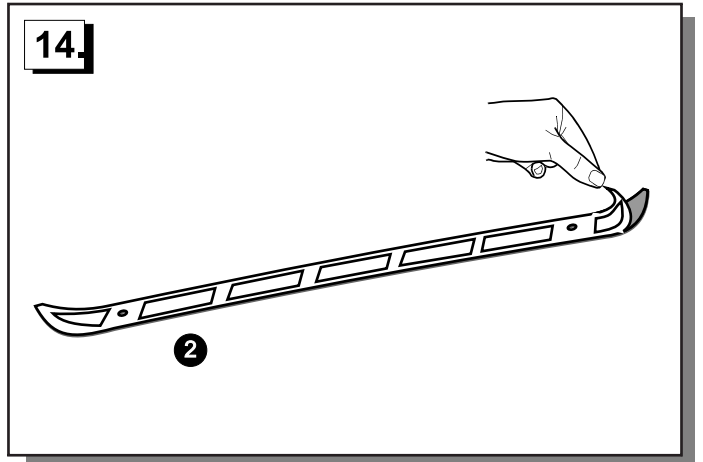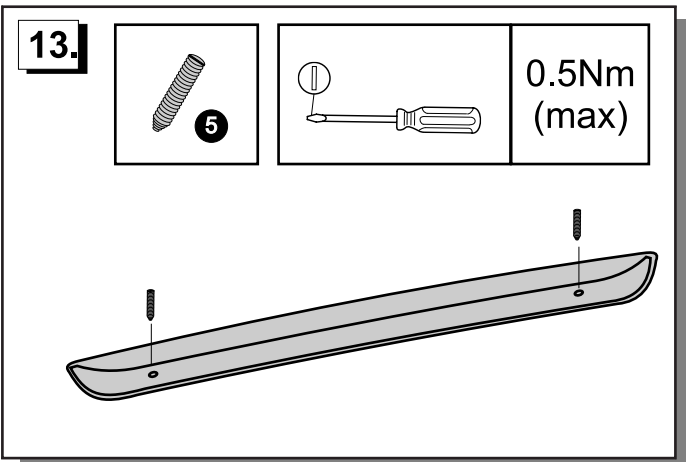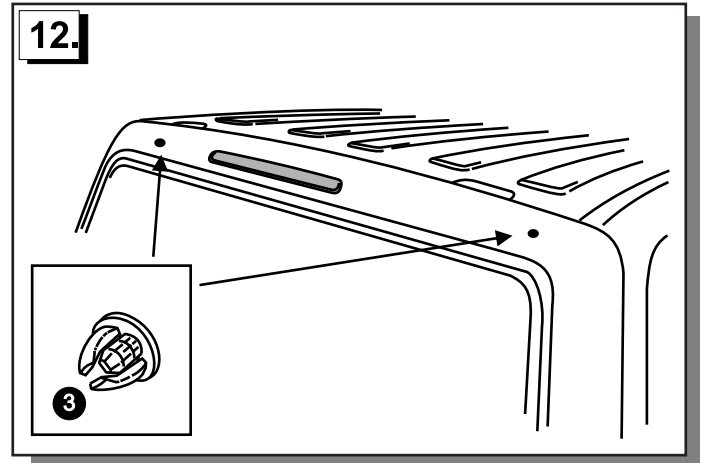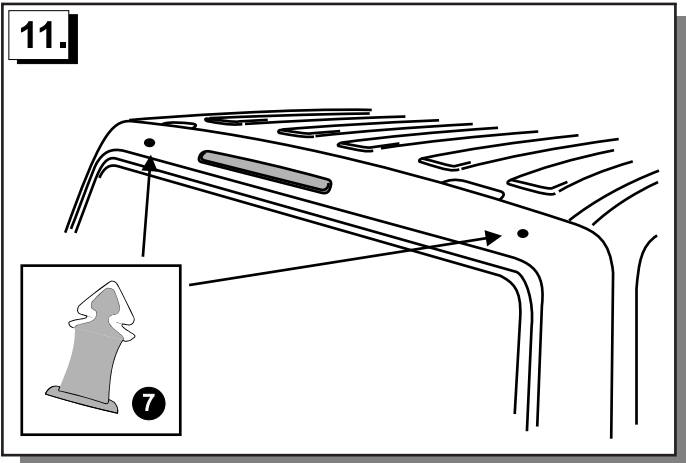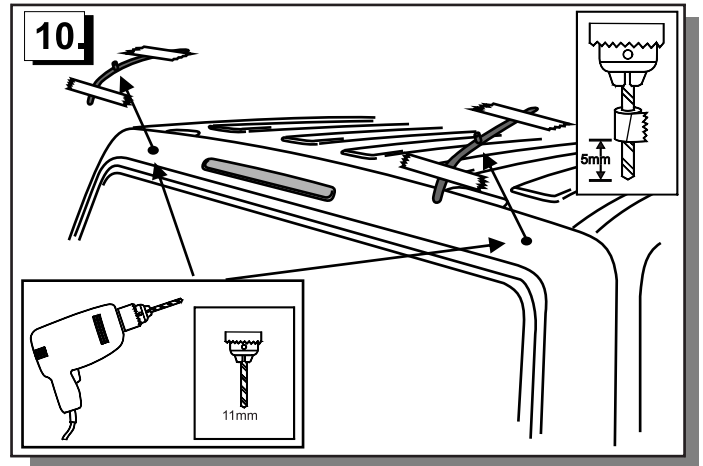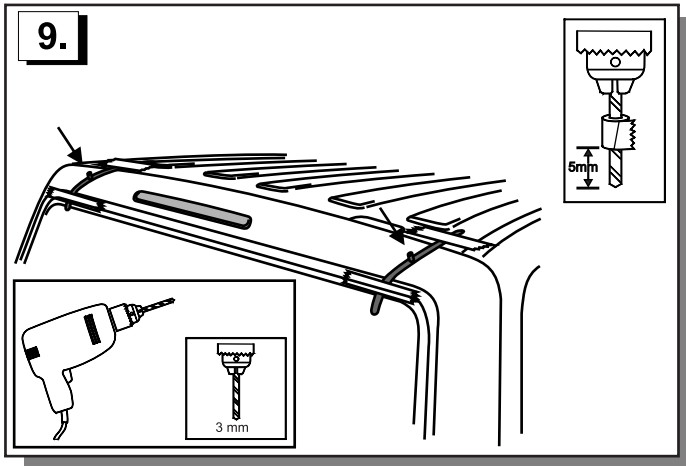

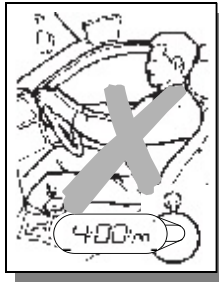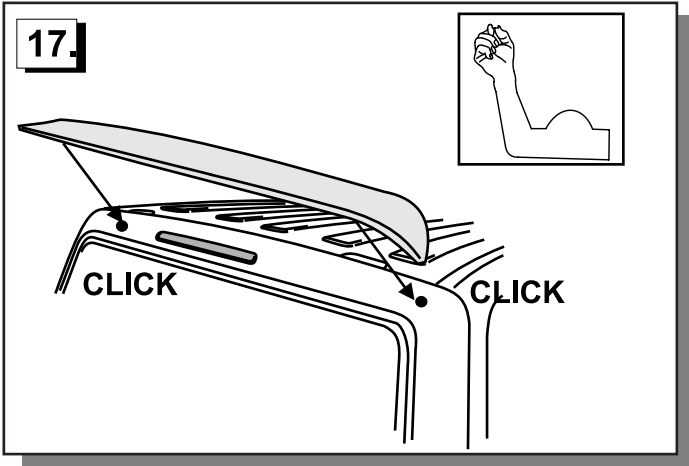

Curing time
Do not drive for 4h

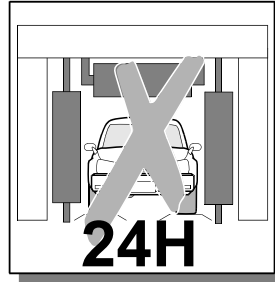

Do not wash for 24h
following installation

